


PYLE® PLVM56MN

Whole indication & illumination

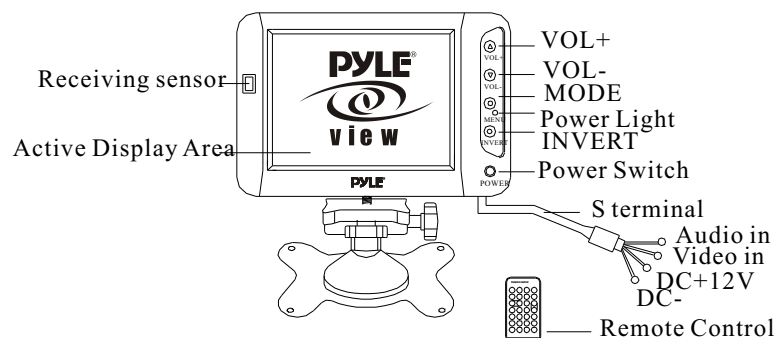

- 1> POWER: Power On /Off
- 2> TIMER: Timer power off set up. Every press the **TIMER** key, the revolving time change selectable. The longest it can keep is 180 minutes

→ 15 → 30 → 45 → 60 → 90 → 120 → 150 → 180 → OFF →

- 3> DISPLAY : press this key and display the situation of video, press again and display logo, it exit as if press again.
- 4> MUTE key: Press this key, sound disappears press again or VOL +/- key, the sound return normally
- 5> P.P press once Form settle → press again Standard, → (press again) soft → (press again) brightness, four kinds of forms, can choice according to your interesting.
- 6> GAME Named Russia Shape , press “GAME” will introduce menu function of operation , additional press “SYSTEM” start or stop.
- 7> CALENDAR: From 1900 to 2099(two hundred years), press “CH+/-” to adjust the year number, press “VOL+/-” to adjust the month number.
- 8> AV/TV: press this key, monitor display the signal of AV1
- 9> VOL +/-Control the volume and also as a function to adjust the menu
- 10> MODE: Press once, the menu can revolving to select, then press “VOL- or VOL+” to adjust the item number

→ BRIGHT → COLOR → CONTRAST → HUE →

- 11> CH +/-: Menu option select
- 12> SYSTEM/INVERT: picture up/down, left/right reverse function
- 13> LANGUAGE: OSD menu font with Chinese, English, Arabic, Russian, German are selectable to display.

Technical Specification

- *power voltage 12V DC 10% 650mA
- *power consumption 7.8W
- *Video input 1Vp-p(PAL NTSC)
- *pixel format 960(W)X234(H)
- *color system PAL NTSC
- *overall dimension 172X116X29(mm)
- *viewing area 115X84 (mm)
- *screen size 5.6
- *operate temperature 0 ~ 60 storage temperatur 10 ~ 85
- *net weight 490g 20g

Accessories

- | | |
|---------------------------------|------|
| *TFT Color Monitor | 1 pc |
| * TFT color monitor booklet | 1 pc |
| * DC/Audio/Video line(compose) | 1 pc |
| * Remote control SPR-N56 | 1 pc |
| * Plastic stand | 1 pc |

Maintenance

To avoid electrical shock, do not open the enclosure .high voltage is present. No user serviceable parts inside the enclosure

Do not use any chemical solvent. Cleaning agent or corrosive detergent to clean away dirt on the surface of the screen. To clean off dirt or finger print, we recommend use a soft damp lens cleaning cloth.

Should there be requirement to replace blown fuse, do remember to disconnect all power supply and switched off the unit before replacing it with a new one . use only correct rating fuse to avoid damaging the unit.